


ELR01/30PN Connection Diagram

The Earth MUST NOT pass through the Toroid. For single phase applications, only the live and neutral need to be passed through the Toroid.

***Cabling:**

For distances >1m, use twisted pair cable between the unit and Toroid.

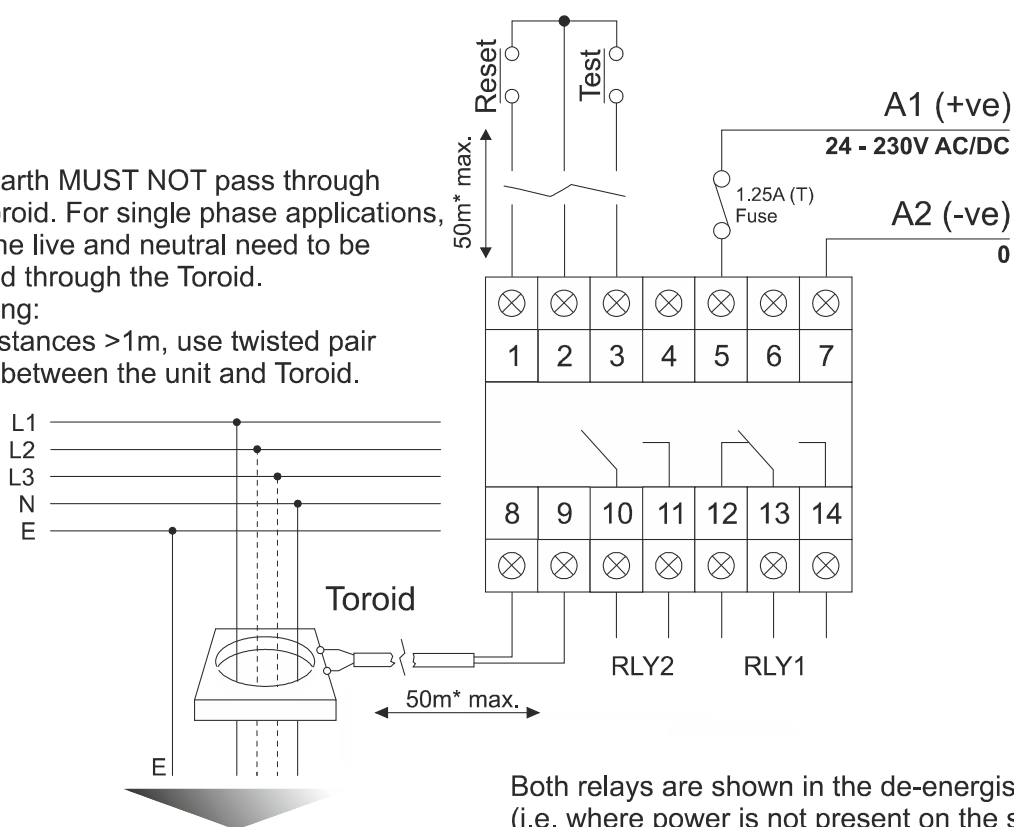

Both relays are shown in the de-energised state (i.e. where power is not present on the supply terminals)