

Type: P9680 & P9680C




Combined Overcurrent and Earth Fault Relay

- True R.M.S. measurements
- Low Set and High Set tripping thresholds for both Overcurrent and Earth Fault detection
- 6 selectable IDMT (Inverse Definite Minimum Time) characteristic curves
- Adjustable DT (Definitive Time)
- Three phase over current and earth fault detection with live display of individual phase and earth fault currents
- Last trip memory (last 10 trips stored and can be recalled)
- Pre-defined selectable CT ratio's (5:5....6000:5)
- Microprocessor based (self-checking) with non-volatile memory
- "Ecosmart" Energy efficient power supply design
- Rear mounted pluggable connectors for supply, relay contacts and current inputs
- MODBUS-RTU version available (P9680C)



Dims:
W x H. 96 x 96mm (front)
W x H. 89.5 x 89.5mm (main body)
L. 100mm


PRESENTATION

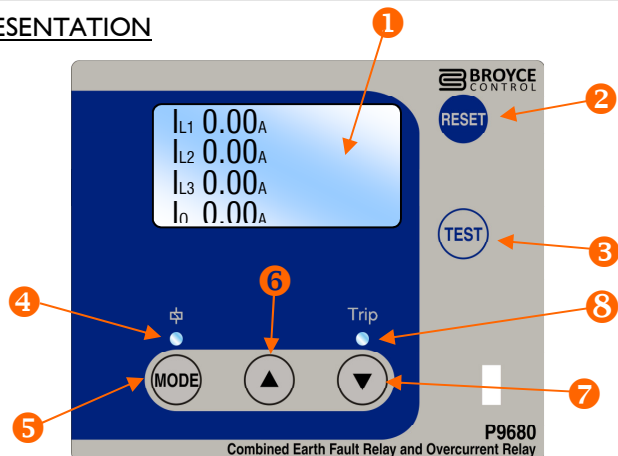

1. LCD (Liquid Crystal Display) for user information
 2. "RESET" button
 3. "TEST" button
 4. "Power supply" green LED indication
 5. "MODE" button*
 6. Parameter increment button*
 7. Parameter decrement button*
 8. "Trip status" red LED indication
- * accessible only when the front cover is open


FUNCTION OVERVIEW

Programming mode.

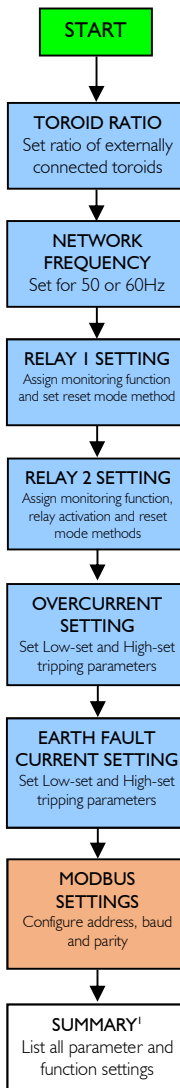

Programmable parameters P9680C only

User settings summary mode

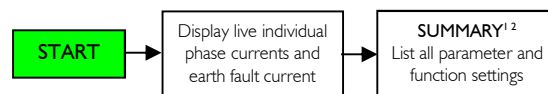

¹ Summary screens are split into two with one screen showing Overcurrent settings and the other showing Earth fault settings.
² Displaying of the Summary screens during normal operation is achieved via subsequent presses of the "RESET" button. See Section 8. QUICK VIEW OF USER SETTINGS for further information.

OPERATION & OVERVIEW

The P9680 and P9680C (from the P9600 series family of IDMT/DT relays) are microprocessor-based relays designed to monitor and detect Overcurrent on individual phases and non-directional Earth faults (by measurement of the neutral current) in 3-phase applications. Typically, they are wired in conjunction with external current transformers of the feeder to be protected.

The P9680C model provides a MODBUS communication allowing the user access to settings, measurements and carry out a test and reset operation if required. Refer to the end of data sheet for further information.

A clear backlit LCD provides all key information the user requires for both operation and setting up. Setting is achieved in a few simple steps and requires no previous knowledge of product operation.

Normal operation provides the user with actual live individual phase currents and earth fault current all on one screen. The actual phase current represents that of the current passing through the primary side of the externally connected CT's. This is achieved by the setting of the ratio for the CT.

Programming mode allows the user to assign the operation mode for both internal relays. They can be individually assigned to Overcurrent, Earth fault or a combination of both. They can also be configured for Auto or Manual resetting. Relay 2 has the added option of being allowed to energise at the start or end of a time out period. If assigned to energise at the start, the Relay can be used to operate a buzzer or lamp giving early warning before a system actually shuts down.

Low-set and High-set thresholds can be programmed for both Overcurrent and Earth fault detection. The time current characteristic of the low-set units are selectable between Normal Inverse curve 3/10, Normal Inverse curve 1.3/10, Long Time Inverse curve, Very Inverse curve, Extremely Inverse curve, Extremely Inverse 0.65 curve and Definite Time. High-set units are the Definitive Time type. Instantaneous tripping is possible by setting the time to minimum.

Two simple Summary screens are displayed once the programming is complete. The same screens can also be displayed by presses of the "RESET" button. This allows the user to access key information with the tamperproof transparent cover closed and sealed.

A Test mode is provided (also accessible with tamperproof transparent cover closed) to confirm the correct operation of the internal relays. The relays will energise when the "TEST" button is pressed and de-energise when the button is released (AUTO Reset) or when the "RESET" button is pressed (MAN Reset).

Following a trip condition, the information about the trip is then stored. This can then be recalled later if required using the "RESET" button to access the information. The P9680/P9680C have the ability to store up to 10 trips and using the "Up" and "Down" buttons, allows each trip to be displayed individually. Each trip is also marked with a time stamp showing the time from power up as well as the time from the previous trip. This feature is very useful for establishing a pattern on particular inputs, knowing when they occurred and how frequent!



Broyce Control Ltd., Pool Street, Wolverhampton, West Midlands WV2 4HN. England

Tel: +44 (0) 1902 773746 Fax: +44 (0) 1902 420639 Email: sales@broycecontrol.com Web: www.broycecontrol.com

The information provided in this literature is believed to be accurate (subject to change without prior notice); however, use of such information shall be entirely at the user's own risk.

• INSTALLATION



Installation work must be carried out by qualified personnel.


- **BEFORE INSTALLATION, ISOLATE THE SUPPLY. THIS PRODUCT IS DESIGNED TO CONNECT TO SEVERAL TYPES OF CIRCUITS. ENSURE ALL ARE ISOLATED ^**
- Remove the **P9680** from the packaging.
- Lift the raised part of the side clip in order to withdraw from the housing. Carry this out on each side.
- Insert the **P9680** into the panel cut-out and fit the side clips back on to the housing.
- Slide the clips towards the front of the unit until they come in to contact with the reverse of the panel. The unit is now secured in place.
- Wire the supplied female pluggable connectors as required.
- Plug the connectors into the relevant sockets on the rear of the unit.
- The **P9680** is now ready for powering and programming.

☞ The front window of the P9680 is supplied with a clear protective film which can be removed as and when necessary.


^ When carrying out future maintenance on the product or application and it becomes necessary to disconnect the connectors from the product, ensure for the Current Transformer connector, **they do not remain open circuit**. This can lead to high voltages being present on this connector.

• NORMAL OPERATION

- Apply power to the unit and the green “Power supply” LED will illuminate.
- The LCD will momentarily display a welcome screen as shown...

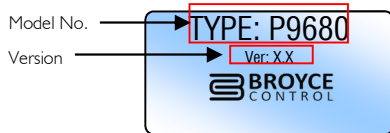


...then after a short delay reverts to indicating the following information:

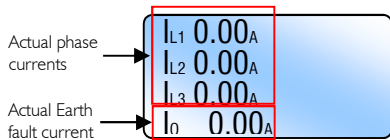

• TEST MODE

- Press and hold the **TEST** button and both relays will energise. The LCD will display the characters “TEST” and the product part number (as below). The LCD backlight and red “Trip” LED will flash.

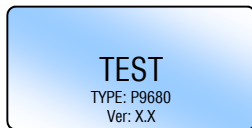

- Release the **TEST** button and the relay(s) will remain energised if set to Manual reset or de-energise if set to Auto reset.
- Press the **RESET** button to de-energise relay(s) which are set to Manual reset. The LCD will revert back to Normal operation. The LCD backlight and red “Trip” LED will stop flashing.

☞ Testing should be carried out on a regular basis to check the integrity of the P9680.



DO NOT use this product to provide a means of isolating circuits in order to work on when placed in the “TEST” mode. This should only be done by means of operating isolators, circuit breakers or other methods of removing power in this application.

• PROGRAMMING

Programming/setting of the **P9680** is carried out using the 3 buttons located behind the transparent cover.



The **MODE** button selects the required parameter to be changed. The **▲** **▼** buttons either increment or decrement a value accordingly.

Any adjustments made are stored by the pressing and holding of the **RESET** button until the LCD shows the word “Saved!” See Section 7. SAVING OF SETTINGS.


☞ Please read the “Notes during programming” before commencing with the following.

IA. TOROID RATIO

☞ Setting the Toroid Ratio will allow the “actual” Phase currents (I_{L1} , I_{L2} , I_{L3}) and Neutral current (I_0) displayed on the LCD to represent that of the currents flowing through the external CT's. If no CT's are used, the parameter should be set to 5/5 (i.e. 1:1). The setting applies to all CT's.

☞ Default setting is “5/5”

- Press and hold the **MODE** button. The LCD displays a screen showing the characters “User Settings” then the following screen appears...

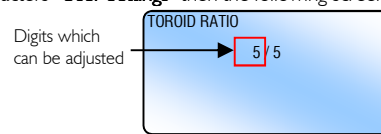


- Press either **▲** or **▼** to set the primary value of the external CT's.

☞ The digit after the forward slash “/” cannot be changed.

IB. NETWORK FREQUENCY

☞ Default setting is “50Hz”

- Whilst in the same screen as that for the Toroid Ratio (see IA.), press the **MODE** button to display the options for **NETWORK FREQUENCY**.

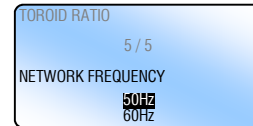


- Press either **▲** or **▼** to select between 50Hz or 60Hz. This should be set to suit the frequency of the network being monitored.
- Press and hold the **MODE** button to set the options for “Relay 1” as described in the next section.


2. RELAY 1 SETTING

☞ Default setting for Relay 1 is linked to “O/C & E/F”. Resetting mode is Manual.

- The LCD displays the following screen. The options under “1:” are displayed and the default setting highlighted.

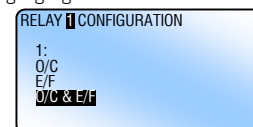

- Press either **▲** or **▼** to select how Relay 1 is assigned to tripping.
- Press the **MODE** button and the options under “2:” for resetting are displayed and the default setting highlighted.

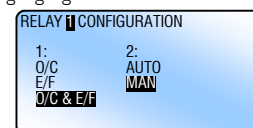

Actual LCD presentation when adjustable parameters are displayed.

- Press either **▲** or **▼** to select between **AUTO** resetting or **MANUAL** resetting (after a fault has occurred).

continued on next page...


PROGRAMMING (continued)

- Press and hold the **MODE** button to set the options for "Relay 2" as described in the next section.

3. RELAY 2 SETTING

Default setting for Relay 2 is linked to "O/C & E/F" and energising at the end of the time out period. Resetting mode is Auto.

- Setting of "Relay 2" is carried out in a similar manner as "Relay 1", however it is necessary to assign the relay to either energise at the start (S) or end (E) of the time out period.

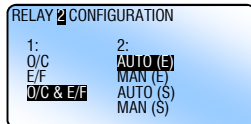

Actual LCD presentation when adjustable parameters are displayed.


- Press and hold the **MODE** button to set the options for "OVERCURRENT" as described in the next section.

4. OVERCURRENT SETTING


The description for the Curves is abbreviated when displayed on the screen. Refer to "IDMT Characteristic Curves" for further explanation.

Default settings for Overcurrent are shown in the last LCD screen example in this section.

- Settings for Overcurrent are displayed in turn following subsequent presses of the **MODE** button. The Low-set trip current (I>) is displayed first.

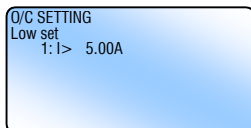

- Press either **▲** or **▼** to change the current.
- Press the **MODE** button to select the remaining settings and use the **▲** and **▼** buttons to change them.

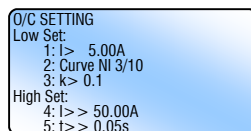

Actual LCD presentation when adjustable parameters are displayed. Screen example above also shows the default settings for OVERCURRENT.

- Press and hold the **MODE** button to set the options for "EARTH FAULT" as described in the next section.


If the Curve in selection "2:" is set to Definite Time, then selection "3:" will display "3: t>" and the required delay can then be set.

If High-set is set to Disable in selection "4:", then I>> or t>> cannot be adjusted.

5. EARTH FAULT SETTING

Default settings for Earth Fault are shown in the LCD screen example in this section.

- Settings for Earth Fault are carried out the same as described for Overcurrent.

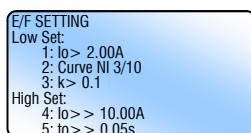

Screen example showing the default settings for EARTH FAULT.


- Press and hold the **MODE** button for either:
 - Summary of the "OVERCURRENT" then "EARTH FAULT" settings (Model: P9680)
 - Option to change the MODBUS settings (Model: P9680C)

If the Curve in selection "2:" is set to Definite Time, then selection "3:" will display "3: to>" and the required delay can then be set.

If High-set is set to Disable in selection "4:", then I0>> or to>> cannot be adjusted.

6. MODBUS SETTING (P9680C only)

- Here there is the option to set the Address, Baud rate and Parity. Use the **MODE** button to select the different parameters.

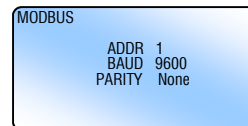


Actual LCD presentation when adjustable parameters are displayed.

- Press either **▲** or **▼** to change the parameter values.
- Press and hold the **MODE** button to see a summary of the "OVERCURRENT" then "EARTH FAULT" settings as described in the next section.

7. OVERCURRENT & EARTH FAULT SUMMARY

It is not possible to edit settings when these screens are displayed.

- Following the setting of "Earth Fault", the LCD displays the "Overcurrent Summary" screen showing a summary of the settings made during programming. All settings are displayed. The selected CT ratio, Network Frequency and Relay operation (following a Reset) information is also displayed.

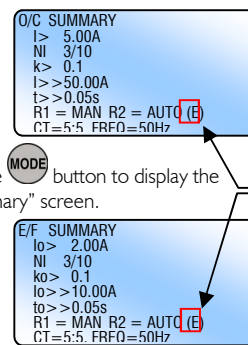

The letter in brackets refers to whether Relay 2 has been set to trigger at the start or end of the time out period.

(E) = End of time out
(S) = Start of time out
Either abbreviation can appear after the word MAN or AUTO See Section 3. RELAY 2 SETTING

- Press and hold the **MODE** button to display the "Earth Fault Summary" screen.

8. SAVING OF SETTINGS

- If after viewing the Summary screens the settings are correct, press and hold the **RESET** button until the word "Saved." appears. Any new settings are now stored.
- The screen will revert back to Normal operation.

8. QUICK VIEW OF USER SETTINGS

It is not possible to edit settings when these screens are displayed.

This feature can also be activated with the front window closed!

- Press and hold the **RESET** button to display the initial power up screen.
- Press the same button again to display the "Last Tripped Information" screen (refer to the next page for further information on this feature).
- Press again to display the "Overcurrent Summary" screen.
- Press again to display the "Earth Fault Summary" screen.
- Press again to display the contact details for Broyce Control.
- Press again to revert back to Normal operation.

9. LAST TRIPPED INFORMATION

Refer to next page for detailed information of this feature

Notes during programming

If during programming it is necessary to abort, press the **RESET** button briefly.

Pressing and holding either **▲** or **▼** for > 1 sec. will increment or decrement the new value at a quicker rate.

Stepping through each User Setting screen is performed by pressing and holding the **MODE** button until the desired screen is displayed.

Short presses of the **MODE** button will allow further editable settings to be changed within a specific screen.

If the user remains in a setting or summary screen where no adjustments or button presses are made within a certain period, the screen will revert back to Normal operation. Additionally, any settings that have been made but not stored will not be saved.

"O/C" refers to Overcurrent and "E/F" refers to Earth fault.

• **PROGRAMMING (continued)**


9A. LAST TRIPPED INFORMATION

☞ This information is held in memory even if power is removed.

This feature allows the user to view and recall the key information relating to the last trip event and it can store up to 10 trip events. It is accessed as described in Section 8 on the previous page.

The information displayed highlights the cause of the trip (i.e. which phase for example), the level of current at the time the trip occurred; the triggering method (Low-set or High-set) and which relays were activated. It also shows the elapsed time from powering the P9680 to the trip occurring and displayed against "Ttrip" as well as showing the time difference between the trip displayed and the one previous to that. This is shown against "Tdiff".

An example of the screen layout is shown below.

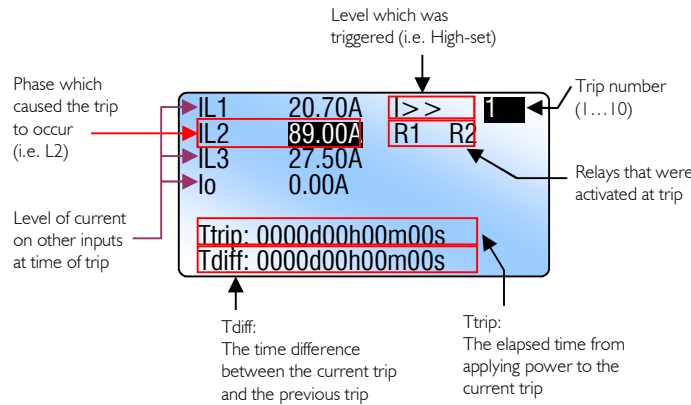

☞ If there is only one trip event stored in the memory, the display will show "Tdiff: ----d--h--m--s" when viewed.


9B. RECALLING THE LAST TRIPPED INFORMATION

☞ If the unit has logged the maximum number of trips which can be stored, then the display will show "Tdiff: ----d--h--m--s" when trip screen 10 is viewed.


☞ The screen will revert back to Normal operation after 1 minute if no further button presses are made.

☞ If a trip condition occurs whilst in this mode, the screen will automatically change to display the information relating to the current status.

- As described in Section 8, use the **RESET** button to gain access to the Last Tripped Information screen. The display will show the most recent trip information as follows:

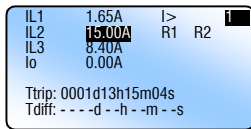

- If more than one trip event is stored, use the **▲** and **▼** buttons to select the screens accordingly.

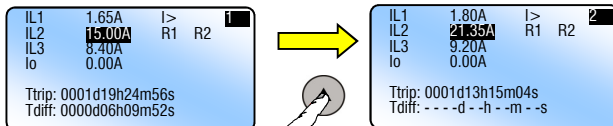

The example on the left shows the problem on phase L2 on both trip events. The difference between the first recorded trip and second was **6h 09m** and **52s**.


- Press the **RESET** button to exit the screen information when finished or allow to time out automatically.

9C. CLEARING THE LAST TRIPPED INFORMATION HISTORY

☞ Once the information has been deleted, it will not be possible to recall this.

☞ "Ttrip" information is still retained but won't be displayed after the carrying out this operation (See 9D)

- Press the **RESET** button to access the relevant screen.
- Press the **▲** and **▼** buttons simultaneously to delete the information. When this is complete, the screen will show:

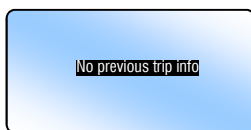

- Press the **RESET** button again to exit.

9D. CLEARING "Ttrip" INFORMATION


☞ If the tripping history hasn't been deleted, previous information will be displayed from the last time the unit was powered up.

- The "Ttrip" information will still be held in memory after deleting the trip history is made and also if power is removed and re-applied. However, when power is re-applied, the internal counter will reset and start from zero
- Only when a new trip condition occurs will the "Ttrip" information get updated and be displayed on the most recent screen.


TRIPPING MODES

1. OVERCURRENT

- A fault which develops on a phase will be indicated by an increase in current reading on the LCD. When the level of current exceeds the Low-set setting, the phase at fault will be highlighted by the digits flashing.
- The LCD backlight will flash.
- Relay 2 will energise if assigned to Overcurrent and set to energise at the start of the time out period (See Section 3. RELAY 2 SETTING).
- The characters "I>" will display to indicate the Low-set has been triggered.

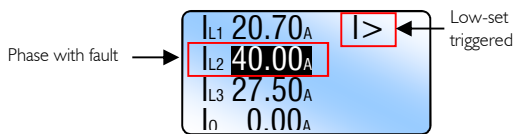

- If the current continues to increase above the High-set setting, the characters "I>" will change and display "I>>" to indicate the High-set has been triggered.

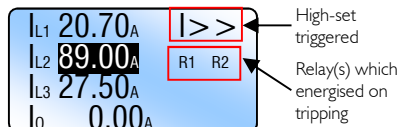


- When the unit finally trips, the digits of the phase at fault will stop flashing and remain highlighted. This allows the user to see which phase was at fault and caused the unit to trip.
- The red "Tripped" LED will also flash.
- The relays which energised are also displayed on the screen after tripping.
- Press **RESET** to reset and return the unit back to normal operation (assuming the fault has been cleared). The LCD reverts back to displaying the normal system currents and the red "Tripped" LED stops flashing.

☞ If either relay is set for Auto resetting, then they would have de-energised after the fault had cleared. The corresponding relay ident (i.e. R1 and/or R2) on the display would also disappear. Pressing the "RESET" button will only clear the LCD. If either relay is set for Manual resetting, then pressing the "RESET" button will de-energise the relay(s) and clear the LCD.


In the event of an Overcurrent condition, the basic sequence of events is shown below.

☞ Assuming High-set trip is enabled.

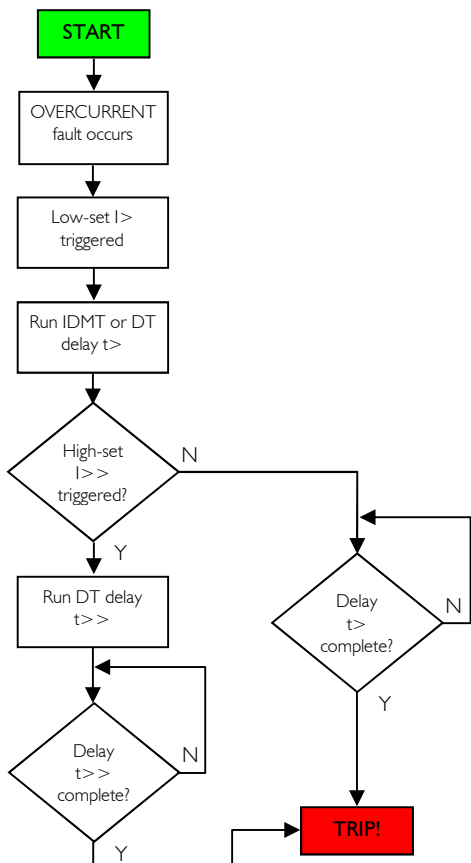


2. EARTH FAULT

- When an Earth fault occurs causing a flow in current through the Neutral, an increase in current reading on the LCD will occur. When the level of current exceeds the Low-set setting, the reading will be highlighted by the digits flashing.
- The LCD backlight will flash.
- Relay 2 will energise if assigned to Earth fault and set to energise at the start of the time out period (See Section 3. RELAY 2 SETTING).
- The characters "Io>" will display to indicate the Low-set has been triggered.

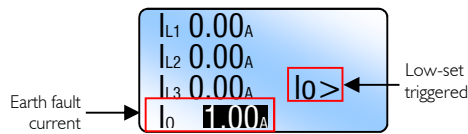

- If the current continues to increase above the High-set setting, the characters "Io>" will change and display "Io>>" to indicate the High-set has been triggered.

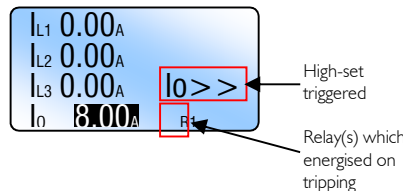


- When the unit finally trips, the digits will stop flashing and remain highlighted. This allows the user to see what caused the unit to trip.
- The red "Tripped" LED will also flash.
- The relays which energised are also displayed on the screen after tripping.
- Press **RESET** to reset and return the unit back to normal operation (assuming the fault has been cleared). The LCD reverts back to displaying the normal system currents and the red "Tripped" LED stops flashing.

☞ If either relay is set for Auto resetting, then they would have de-energised after the fault had cleared. The corresponding relay ident (i.e. R1 and/or R2) on the display would also disappear. Pressing the "RESET" button will only clear the LCD. If either relay is set for Manual resetting, then pressing the "RESET" button will de-energise the relay(s) and clear the LCD.


In the event of an Earth fault condition, the basic sequence of events is shown below.

☞ Assuming High-set trip is enabled.

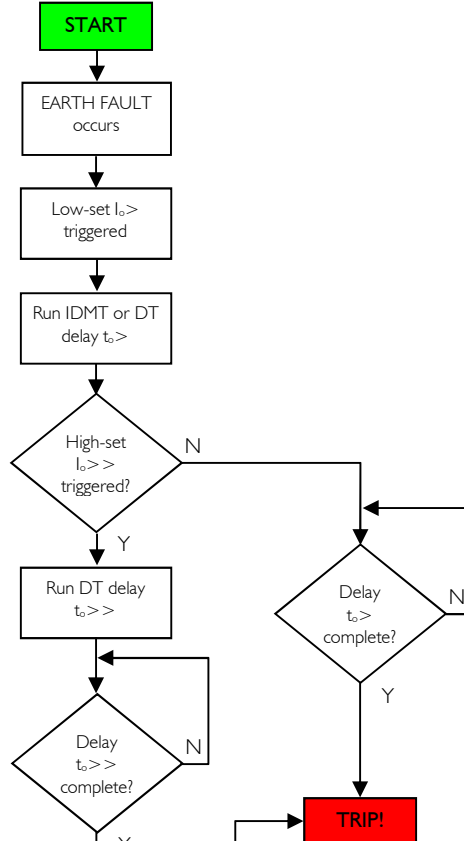


• **IDMT CHARACTERISTIC CURVES**


Normal Inverse 3/10 (NI 3/10)*

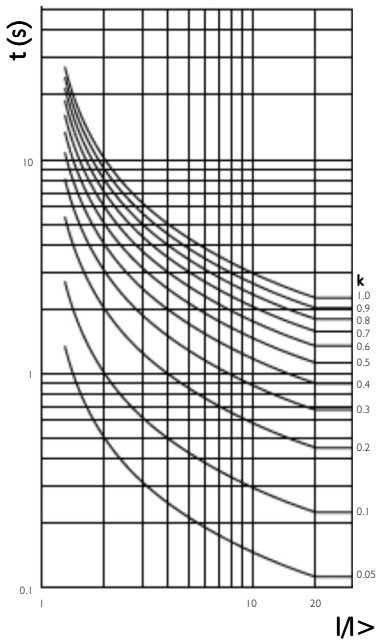


Normal Inverse 1.3/10 (NI 1.3/10)*

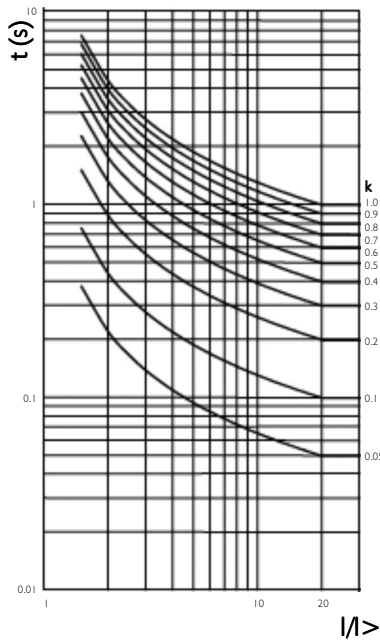


Long Time Inverse (LTI)*

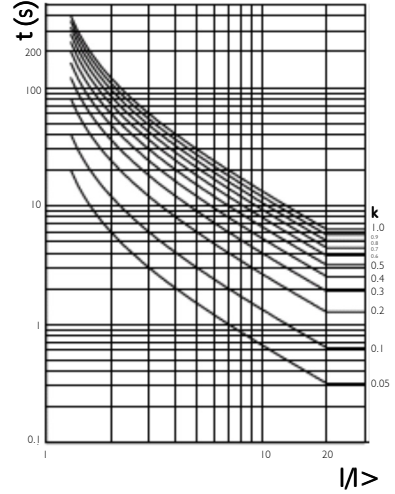


Very Inverse (VI)*

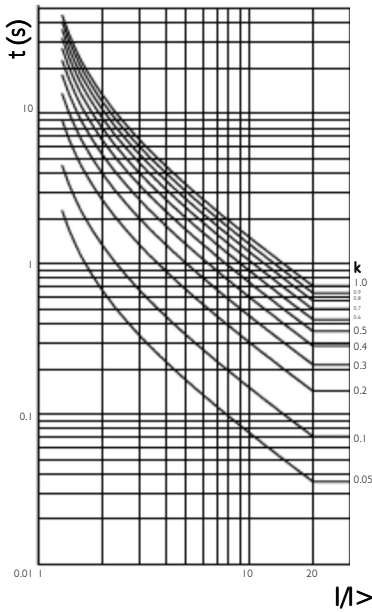

Extremely Inverse (EI)*

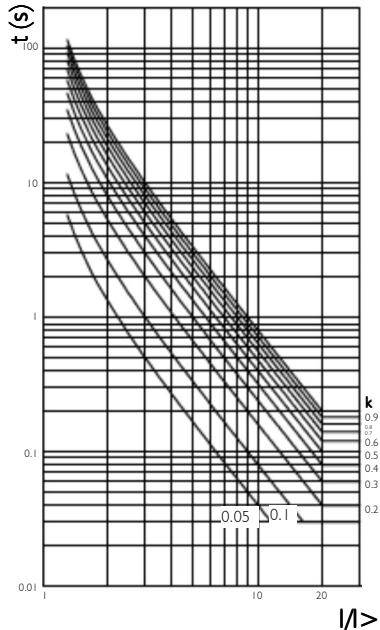


Extremely Inverse (EI 0.65)*

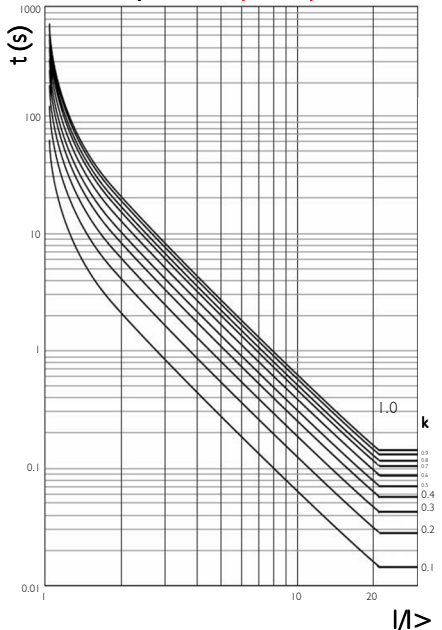

* Abbreviations used in the LCD screen for the selected IDMT characteristic curve.

The sequence of curves that are presented to the user when programming is shown below

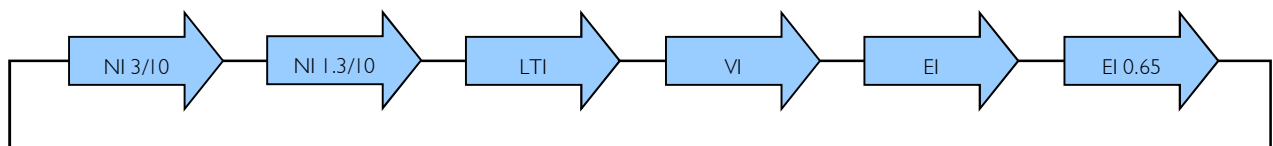

TECHNICAL SPECIFICATION



Aux. Supply voltage Un (1, 2): 85 – 265VAC/85 – 370VDC!
18 – 55VAC/18 – 72VDC*
(Voltage range should be specified at time of ordering)

Rated frequency: 50/60Hz (AC Supplies)
Isolation: Over voltage cat. III

Rated impulse withstand voltage: 14kV (1.2 / 50µs) IEC 60664

Power consumption: 3W max.

* If connecting a fuse externally, a Time Delay type is recommended with a rating of 0.5A or higher.

Rated current input In: 5A (directly connected)
Rated frequency: 50/60Hz
Burden: <0.4VA @ In
Overload: 4 x In (continuous)

External CT's (9.....16): Class P recommended. (with 5A secondary)
Maximum CT primary current rating: 6000A

Overcurrent settings:
Low-set trip (I_>): 0.50 – 10.00A (10 – 200%)
Low-set time multiplier (k_>): 0.05 – 1.00
Low-set definite time (t_>): 0.05 – 100s
High-set trip (I_{>>}): 0.5 – 100A (10 – 2000%) or disable
High-set definite time (t_{>>}): 0.05 – 2.5s


Earth fault settings:
Low-set trip (I_{o>}): 0.10 – 5.00A (2 – 100%)
Low-set time multiplier (k_{o>}): 0.05 – 1.00
Low-set definite time (t_{o>}): 0.05 – 100s
High-set trip (I_{o>>}): 0.10 – 50.00A (2 – 1000%) or disable
High-set definite time (t_{o>>}): 0.05 – 2.5s

Pick up value: +2% of trip setting
Accuracy:
Protection thresholds: ± 5%
Time delay (DT): ± 5% (with a minimum of 50mS)
Time delay (IDMT): ± 5% (with a minimum of 50mS and I > 1.2 x set-trip)
Actual phase current: ± 1% of rated current In
Actual Earth fault current: ± 1% of rated current In
Display update time: < 1 sec.
Repeat accuracy: ± 0.5% @ constant conditions


Ambient temperature: -10 to +60°C
Relative humidity: +95%

Output:
(RL1 - 3, 4, 5): 1 x SPDT relay
(RL2 - 6, 7, 8): 1 x SPDT relay
Output rating:
AC1 250V 8A (2000VA)
AC15 250V 5A (1250VA)
DC1 25V 8A (200W)

Electrical life: ≥ 150,000 ops at rated load
Dielectric voltage: 2kV AC (rms) IEC 60947-1
Rated impulse withstand voltage: 4kV (1.2 / 50µs) IEC 60664

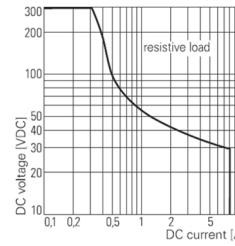

Max. DC Load Breaking Capacity

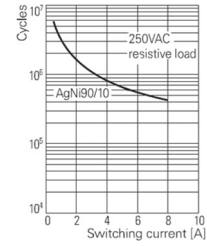

Electrical Endurance

Housing: Flame retardant Lexan
Protection: IP55 / IP20 (rear)
Weight: ≈ 600g
Mounting: Panel mounting. Cut-out = 91 x 91 mm (± 0.5mm)
Max. panel thickness: 12mm

Terminal type: UL94-V0 rated pluggable and re-wireable female connectors comprising:
2-way (Power supply 1, 2)
6-way (Relay contacts 3....8)
8-way (Phase current and neutral inputs 9....16)
Terminal conductor size: 0.05 – 2.5mm² (30 - 12AWG)

Recommended tightening torque: 4.4in lb (0.5Nm)
Wire stripping length: 0.24 – 0.30in (6 – 7.5mm)

Approvals: Conforms to IEC, CE and and RoHS Compliant.
EMC: Immunity: EN/IEC 61000-6-2
Emissions: EN/IEC 61000-6-4
Generic: IEC 60255-26 (EMC), IEC 255-3, IEC 60255-151

() Bold digits in brackets refer to terminal numbers on the rear of the unit.

Options:


The P9600 range also includes individual Overcurrent or Earth fault relays available with either IDMT or DT characteristics. Please refer to separate data sheets.

Additional specification details for P9680C


Communication protocol: MODBUS RTU
Selectable addresses: 1 – 247
Parity options: Even, Odd, None
Baud rate: 1200 – 115200

Connection method: Using pluggable, 3.5mm pitch female connector (supplied with unit)
Recommended wiring type: 2-core + shield (twisted pair, 24AWG) i.e. Belden type: 9841NH

CONNECTION DIAGRAM

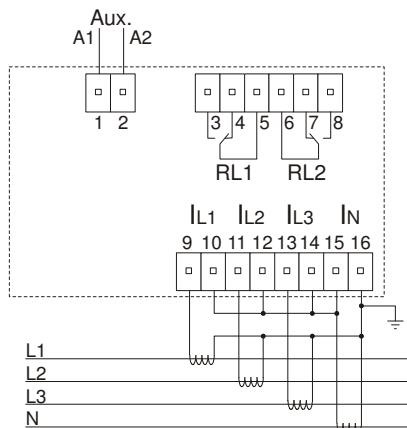

DIMENSIONS

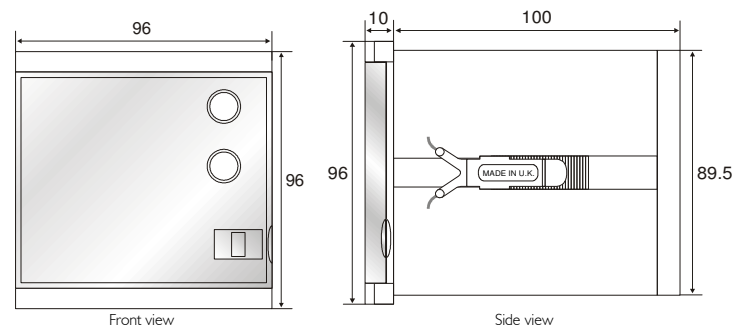


All dimensions are in mm.


• MODBUS COMMUNICATION OPTION (Model P9680C)

I. CONNECTIONS

At the rear of the P9680C, a 3-way terminal/connector is provided allowing for connection to the Modbus system. Only 3 terminals are required, COM (Common/GND), TX- (or Data -) and TX+ (or Data +).

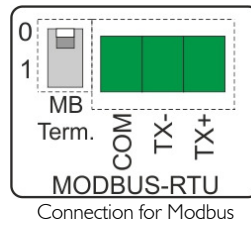

A typical example of how the P9680C's may be arranged is as follows:

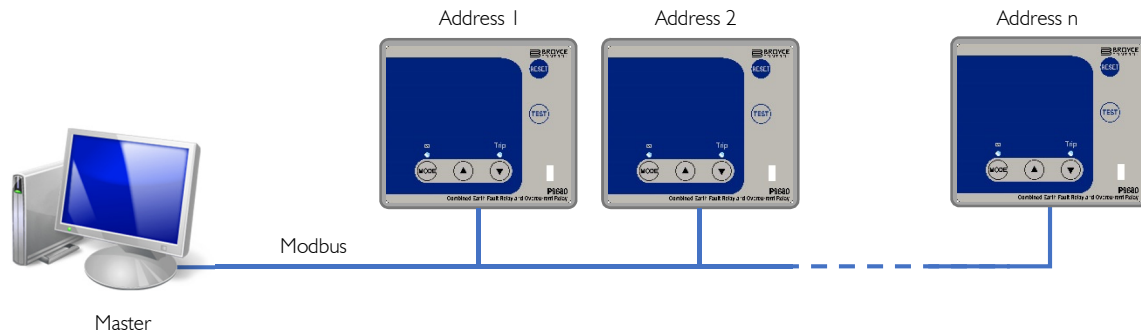

The P9680C is provided with a "Modbus termination" switch. It is recommended that for the last unit connected in the system, the switch is set to position "1". This ensures there are no communication issues by minimising the reflections from the end of the bus.

2. MODBUS COMMANDS

In summary, utilising the MODBUS features allows for the user to access (and change where relevant) the following:

- Product setup and configuration and define the following:
 - External toroid ratio
 - Select Network frequency
 - Configure Relay 1 and Relay 2 operation
 - Configure Overcurrent settings
 - Configure Earth Fault settings
- Measurement and Status
 - IL1, IL2, IL3, Io live and tripped readings
 - Trip history
 - Relative time since power up
- Carry out a product Test or Reset operation

The full MODBUS command set is available in a separate document and available on request.