

Terminal Protection to IP20



Dims: to DIN 43880
W. 17.5mm

- ❑ ***NEW* 17.5mm DIN rail housing**
- ❑ **Microprocessor based**
- ❑ **True R.M.S. monitoring**
- ❑ **7 Selectable monitoring ranges (0.1 – 20V AC/DC)**
- ❑ **Selectable Under or Over Voltage monitoring**
- ❑ **Selectable hysteresis or latch option**
- ❑ **Adjustable trip level and time delay**
- ❑ **Isolated Auxiliary supply (24 – 230V AC/DC)**
- ❑ **1 x SPDT relay output 8A**
- ❑ **Green LED indication for supply status**
- ❑ **Yellow LED indication for alarm status**
- ❑ **Red LED indication for relay status**


Wiring Information and Product Demonstration
Videos can also be found on our YouTube channel

<https://www.youtube.com/user/BroyceControlLtd>




FUNCTION DIAGRAMS

Under Voltage Monitoring (with and without Latch enabled)

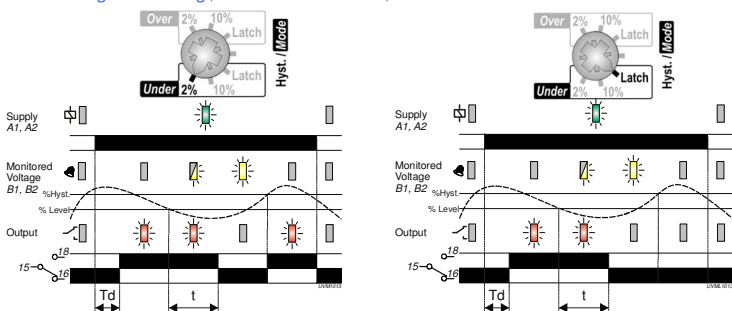

Over Voltage Monitoring (with and without Latch enabled)

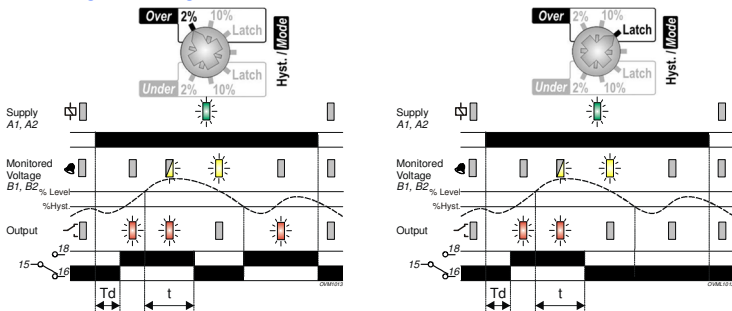

INSTALLATION AND SETTING

- BEFORE INSTALLATION, ISOLATE THE SUPPLY.
- Connect the Auxiliary and Monitored Inputs as required.

⚠ Installation work must be carried out by qualified personnel.

Setting the unit.

- Set the "Hyst. / Mode" selector ⑦ to the required position depending whether under or over monitoring is required. Select either a suitable hysteresis setting of 2% or 10% or choose Latch if required.
- Set the "Range" ⑥ to the required position (depending on monitored input voltage to be monitored).
- Set the "Trip Level %" ⑤ and "Delay" ④ to suit the selected monitoring range and delay to tripping period.

Applying power.

- Apply power and the green LED ① will illuminate.


If Under voltage mode is selected:

- Relay energises / red LED ③ illuminate if the voltage is above the set "Trip Level". If the voltage falls below the "Trip Level", yellow LED ② flashes for the set "Delay" then remains lit. Red LED extinguishes / relay de-energises.

If Over voltage mode is selected:


- Relay energises / red LED ③ illuminate if the voltage is below the set "Trip Level". If the voltage rises above the "Trip Level", yellow LED ② flashes for the set "Delay" then remains lit. Red LED extinguishes / relay de-energises.

CONNECTION DIAGRAM

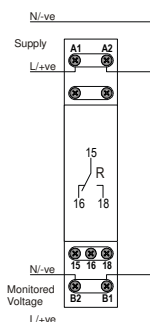

SETTING DETAILS

1. Power supply status (Green) LED
2. Alarm status (Yellow) LED
3. Relay output status (Red) LED
4. Time delay adjustment
5. Trip level adjustment
6. Monitoring range selector
7. Hysteresis / Mode selector

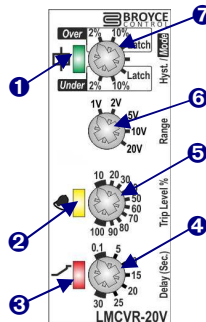

DIMENSIONS

