

# Type: ELRM44V-3/2, V-10/2 & V-30/2 (0.5s)



## Earth Leakage Relay (Variable) - Type A


- 44mm (2.5 modules) wide DIN rail housing
- 2 Relay outputs - (S.O.) Standard Output operation (Relays energise on trip)
- 3 Models available (3A, 10A and 30A)
- Designed to monitor and detect true RMS earth fault currents (up to 30A) in conjunction with a separate toroid
- LED bargraph provides constant indication of any leakage current
- Microprocessor controlled with internal monitoring (self-checking)
- Adjustable Sensitivity ( $I_{\Delta n}$ ) and Time Delay ( $\Delta t$ ) - 0 (instantaneous)\* to 0.5 seconds
- Separate "Test" and "Reset" push buttons
- Connection facility for remote "Test" and "Reset" push buttons or N.O. contacts
- Toroid open circuit detection forces unit to trip (Red LED flashes during this condition)
- LED indication of Supply status and fault condition after unit has tripped

Dims:  
to DIN 43880  
W. 44mm



Terminal Protection to IP20

### FUNCTION DIAGRAM

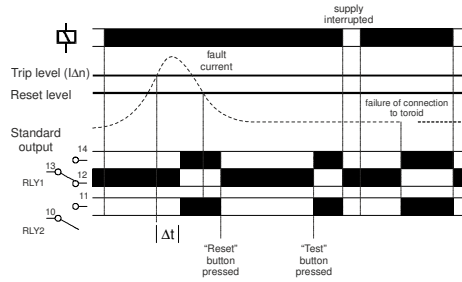

### TECHNICAL SPECIFICATION

Please state Supply voltage when ordering.

Supply voltage  $U_n$  (5, 6, 7): 12 - 125V DC (85 - 110% of  $U$ )  
(see connection diagram) 24, 115/230, 400V AC (85 - 115% of  $U_n$ )  
All AC supplies are galvanically isolated between Supply and Toroid and remote test/reset connections.  
Frequency range: 50/60/400Hz (AC supplies)  
Isolation: Over voltage cat. III  
Rated impulse withstand voltage: 800V (24V AC supplies), 2.5kV (115V AC supplies)  
(1.2 / 50 $\mu$ s) IEC 60664  
Power consumption (max.): 6VA (AC supplies) 5W (DC supplies)  
Monitored leakage current: Up to 30A (15 - 400Hz) (through external toroid with 1000:1 ratio and connected to terminals 8 and 9)

Sensitivity  $I_{\Delta n}$  (see Accessories also)

**ELRM44V-3/2** 30, 50, 100, 200, 300, 500, 750mA, 1, 2, 3A (user selectable)  
**ELRM44V-10/2** 30, 100, 300, 500, 750mA, 1, 3, 5, 7.5, 10A (user selectable)  
**ELRM44V-30/2** 30, 100, 300, 500mA, 1, 3, 5, 10, 20, 30A (user selectable)

Trip level limits: 80 - 90% of  $I_{\Delta n}$   
Reset Value:  $\approx$  85% of tripped level  
Time delay  $\Delta t$ : 0\*, 60, 100, 150, 200, 250, 300, 400, 500ms (user selectable)  
\*Actual delay for "0" or "Instantaneous" is  $< 25ms$  when fault current @  $5 \times I_{\Delta n}$


**Note:**  
1. For  $I_{\Delta n}$  setting of 30mA, the time delay is fixed to 0 (instantaneous) and is not adjustable (i.e. any other time delay cannot be selected when 30mA is set).  
2. The unit is factory set to 30mA trip and instantaneous delay. Adjustment of these settings can be made if necessary to suit the requirements of the installation. To prevent tampering of the settings, the clear window can be secured in place using a 2mm or 2.5mm wide cable tie (not supplied).

Reset time:	$\approx$ 2S (from supply interruption)
LED indication:	Green
Power supply present:	Green x 3 (25, 50 and 75% of actual trip level)
Bargraph:	Red (see "INSTALLATION" to the left)
Tripped:	Red (see "INSTALLATION" to the left)
Memory:	storage of the leakage fault and reset with the "Reset" push button +95%
Ambient temp:	-20 to +55°C (-5 to +40°C in accordance with IEC 60755)
Relative humidity:	+95%
Output:	1 x SPNO, 1 x SPDT relays
Output rating:	RLY 1 (12, 13, 14) RLY 2 (10, 11) AC1 (250V) 8A (2000VA) 6A (1500VA) AC15 (250V) 2.5A 4A DC1 (25V) 8A (200W) 6A (150W)
Electrical life:	$\geq$ 150,000 ops at rated load
Dielectric voltage:	2kV AC (rms) IEC 60947-1
Rated impulse withstand voltage:	4kV (1.2 / 50 $\mu$ s) IEC 60664
Remote "Test" / "Reset" (1, 2, 3)	Requires N.O. contacts. (i.e. push buttons)
Minimum trigger time:	$>$ 80ms (Actual trigger time = 80ms + $\Delta t$ setting for remote "test")
Housing:	Grey flame retardant Lexan UL94 VO
Weight:	$\approx$ 190g (AC power supplies) $\approx$ 110g (DC power supplies)
Mounting option:	On to 35mm symmetric DIN rail to BS5584:1978 (EN50 002, DIN 46277-3)
Terminal conductor size:	$\leq$ 2.5mm <sup>2</sup> stranded, $\leq$ 4mm <sup>2</sup> solid
Approvals:	Conforms to: IEC60755, 60947, 62020, 61543, IEC 61000-4-2, -3, -4, -5, -6, -12 and -16. CISPR 22, CE and Compliant.

- ( ) Numbers in brackets shown above refer to terminal numbers on the relay housing.
- Options
  - For other supply voltages, alternative trip levels or time delays, please consult the sales office.
  - Accessories - Toroids

Toroid Type:	Internal diameter:	$I_{\Delta n}$ (min.) A	Toroid Type:	Internal diameter:	$I_{\Delta n}$ (min.) A
BZCT035	35mm $\varnothing$	0.03	BZCT120	120mm $\varnothing$	0.1
BZCT050	50mm $\varnothing$	0.03	BZCT160	160mm $\varnothing$	0.1
BZCT070	70mm $\varnothing$	0.03	BZCT210	210mm $\varnothing$	0.3

### MOUNTING DETAILS

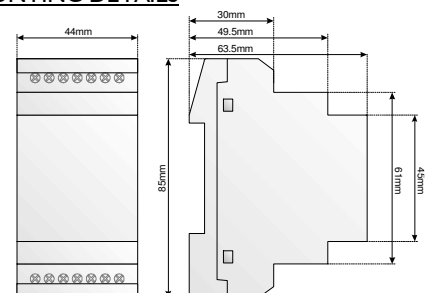

### INSTALLATION



Installation work must be carried out by qualified personnel.

- BEFORE INSTALLATION, ISOLATE THE SUPPLY.**
- Connect the unit as shown in the diagram below (N.B. certain features may not be required and therefore do not need to be connected).
- Apply power, the green "supply on" LED will illuminate and the relays will remain de-energised. The relays will energise if:
  - the fault current level exceeds the set trip level ( $I_{\Delta n}$ )
  - there is a failure of the connection between the relay and the toroid (Note the red "tripped" LED will flash during this condition)

- Prior to a fault occurring, the LED bargraph will indicate the % of  $I_{\Delta n}$  being detected (the display is scaled between 25, 50, and 75% of the actual trip level). After all 3 LED's have illuminated and the unit trips due to an excessive fault current, the red "tripped" LED will illuminate. The unit will now remain in a latched condition.

#### Fault simulation (Test mode)

- The unit can be placed into a fault condition by pressing the "Test" button on the front of the unit (or by pressing the remote "Test" button - if fitted). The output relays operate accordingly.
- Press the "Reset" button on the front of the unit (or remotely - if fitted) to reset the unit. The output relays revert back to their "non-tripped" state.
- The unit can also be reset by interrupting the power supply.
- To satisfy regulations, it is recommended that the device be tested periodically to ensure correct operation.

#### Troubleshooting


- If the unit fails to operate correctly check that all wiring and connections are good.

#### Note:


The operating function of this unit is classed as a **Type A** for which tripping is ensured for residual sinusoidal alternating currents and residual pulsating direct currents, whether applied suddenly or slowly rising. Additionally, this unit is protected against nuisance tripping. This unit will also satisfy the requirements for **Type AC** devices which only need to detect residual alternating currents.

This unit should be installed in conjunction with the latest wiring regulations and practices (IEE, etc).

### CONNECTION DIAGRAM

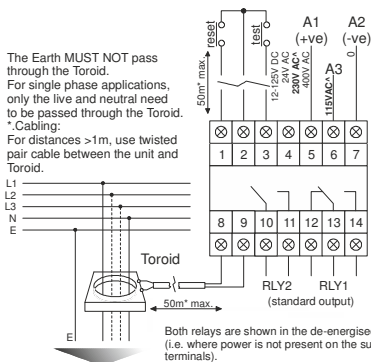

### SETTINGS

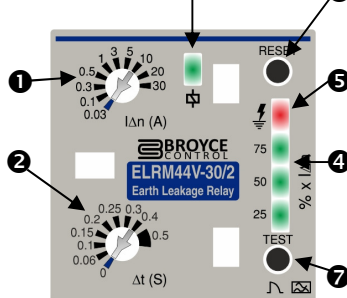

- Key:
- Trip setting adjustment ( $I_{\Delta n}$ ) in Amps
  - Time delay adjustment ( $\Delta t$ ) in Seconds
  - Green "Power On" LED indication
  - Green "Leakage Current" LED indication (%  $\times I_{\Delta n}$ )
  - Red "Tripped" LED indication
  - "RESET" button
  - "TEST" button



ISO 9001:2015  
Cert. No. 14125771

Broyce Control Ltd., Pool Street, Wolverhampton, West Midlands WV2 4HN, England

Tel: +44 (0) 1902 773746 Fax: +44 (0) 1902 420639 Email: sales@broycecontrol.com Web: www.broycecontrol.com

The Information provided in this literature is believed to be accurate (subject to change without prior notice); however, use of such information shall be entirely at the user's own risk.

ELRM44V\_2-2-A.DOCX  
1809